


At a glance Kiox

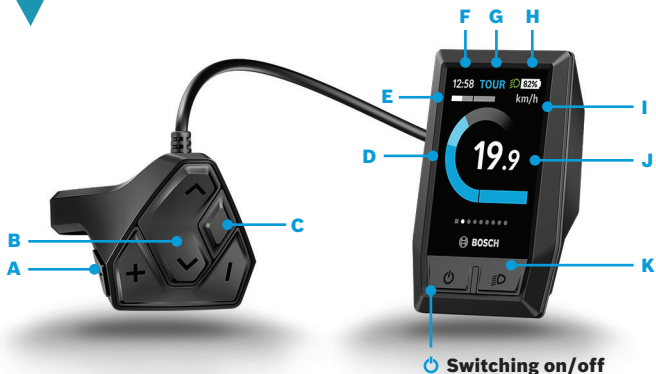

BOSCH
Invented for life



Use \oplus / \ominus buttons to select one of four assisted riding modes.

- Turbo** Powerful assistance for a sporty ride
- Sport** Sporty riding off-road and in urban traffic
- eMTB*** Progressive, dynamic support for a natural riding sensation
- Tour** Balanced assistance for everyday rides
- Eco** Maximum efficiency for maximum range

Functions

- A** Activate Walk Assist
Press Walk assist and hold \oplus
- B** Arrow buttons: toggle between screens & settings
- C** Select button
- D** Rider's effort & motor assist
- E** Current speed compared to average speed
- F** Time or speed
- G** Current riding mode
- H** Battery charge level
- I** eShift (optional)
- J** Current speed
- K** Switch lights on/off

Navigation Personalization Fitness data tracking

Expand your riding options with the eBike Connect app and the eBike Connect portal.

Visit **ebike-connect.com** to learn more.



*The eMTB mode replaces the Sport mode for the Performance Line and Performance Line CX.