


# Gamma X

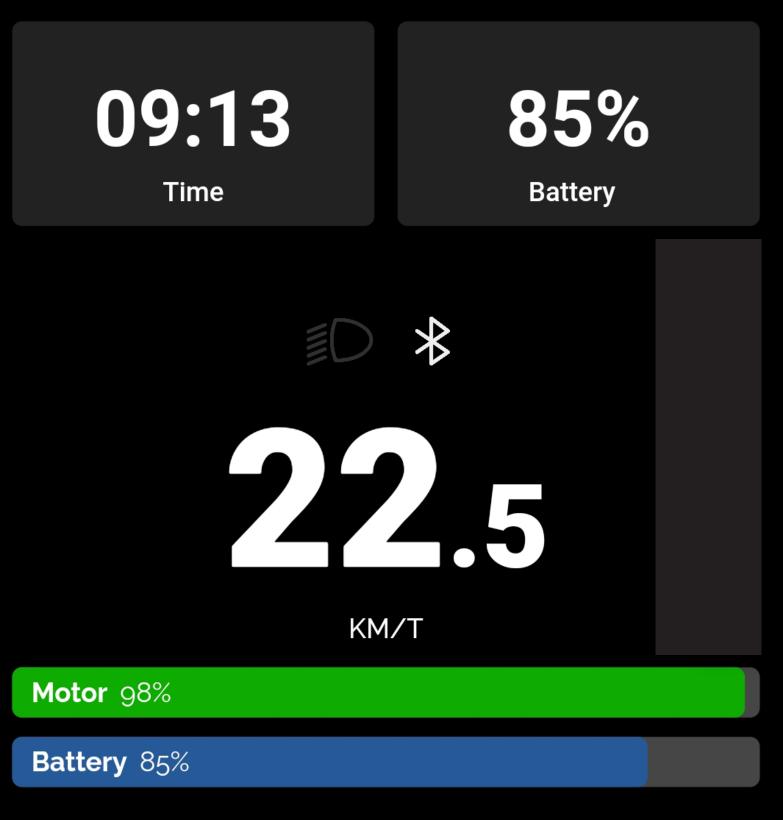

0.5

03:07 ~

# TABLE OF CONTENTS

CONNECT+ APP	
CREATE ACCOUNT	4
APP PERMISSIONS	4
CONNECT THE APP	
DRIVING SCREEN	6
MANAGING TILES	7
MAP	
HISTORY	9
MENU	
MENU - CHANGE BICYCLE	
MENU - PROFILE	
MENU - APP SETTINGS	
MENU - MANAGE PERMISSIONS	
APP TROUBLESHOOTING	


#### CONNECT+ APP

The Connect+ App from Promovec gives you total control over your e-bike equipped with Promovec's advanced electric system. Connect+ is fully compatible with multiple displays that support Bluetooth connection. With Connect+, a world of possibilities opens up:

- Keep track of live data during your bike rides, including current speed, average speed, battery level, and more.
- View your completed rides and position using the map function.
- Register your e-bikes in the app and save important documentation such as purchase receipts, frame numbers, and pictures of your bike.
- Access detailed history and statistics of all your rides.

For the ultimate user experience, we recommend registering as a user. This unlocks all the advanced features of the Connect+ app, allowing you to fully benefit from the fantastic opportunities it brings.

#### CONNECT+ APP

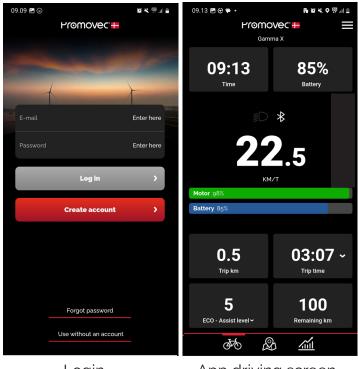

Login







QR code to app store


Арр

## COMPATIBLE DISPLAYS



## **CREATE ACCOUNT**

To make the most of the app, it is recommended to create an account. It is possible to delete all data via the app if you change your mind later.

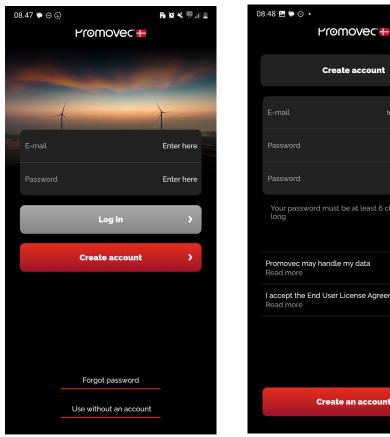

# test@gmail.com Your password must be at least 6 characters long Promovec may handle my data $\checkmark$ I accept the End User License Agreement $\checkmark$ Create an account

Fill in the data and approve


the terms and conditions.

🖪 🐨 🔧 🗐 🗉 🗎

Create account

## APP PERMISSIONS

For optimal use of the app, the app needs permissions to access maps and connect to other devices.

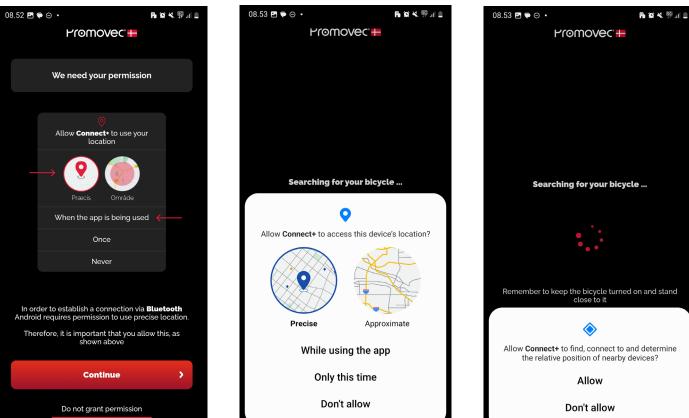


Select - 'While using the app' to enable the use of maps in the app.

"Allow" to connect and view other devices.


Continue to grant permissions.

### CONNECT APP TO E-BIKE


One or more bikes can be connected to the app. Each time a bike is added, it is named, and the frame number is added for easier identification.

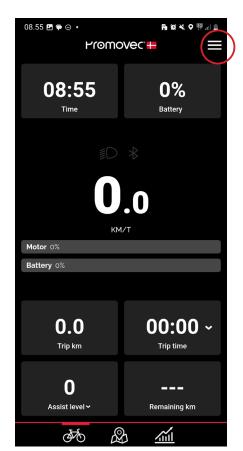

Select 'Menu' at the top right in the driving screen.

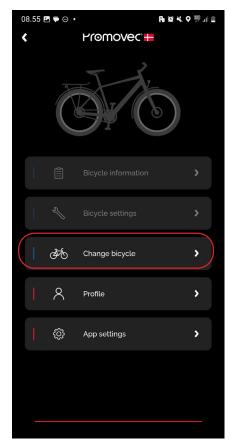

"Change bicycle"

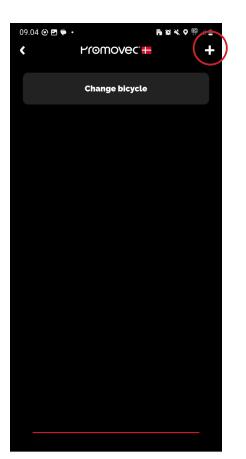

Select the + icon in the top right corner.

09.04 🖪 🕑	• •		┡∎ 🥨 🛰 🗢 🐺 🛯
<	۲ <b>(</b> 0	movec	-
	Connect to your bicycle to get started		
Кеер у	our phone of for the	close to the b best connect	icycle's display tion
<b>4</b> 6	٣		E-bike
	Ac	dd bicycle	>
	Dono	ot add a bicyc	le


Select the bike in the list.

09.04 🖪 😋 🗭 🔹	┡ 💢 🗡 🐺 .:  🗋	
C Promove	€C ₩	
Enter the bicycle's	information	
The bicycle's nickname	Enter here	
Frame number	Enter here	
Bike type	Herrecykel 🕻	
As a helpful feature, Promovec would like to remember your important documents in case of theft. This is optional and without guarantee.		
Purchase receipt	<u>کا</u>	
Key certificate		
Image of the bike		
Add bicycle		

Enter the bike's data and click 'Add'.

# **DRIVING SCREEN**

On the driving screen, the most important information is displayed. Information shown in tiles can bechanged.

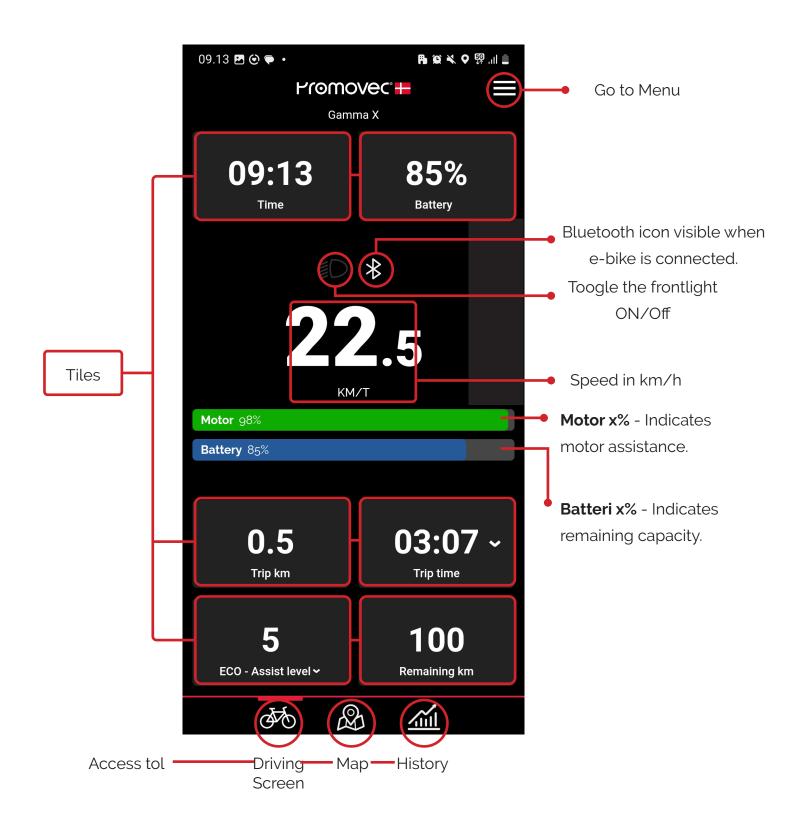

# MANAGING TILES

Driving screen display data in tiles. Select the tiles you want to be active.

Choose between:

- Time
- Speed
- Battery
- Trip time
- Trip km
- Avg. speed
- Total recorded time
- Total recorded distance
- Assist level
- Remaining km
- trip km
- trip meter

Choose and keep your finger on the tile that needs to be replaced, and then select another in the list.


09.05 🖪 💓 🗭 🔸	┡╸였ヾ、♀  ≜
Promo	vec 🕂 📃
Gamr	ma X
09:05	100%
lime	Battery
S	
	*
	$\mathbf{\cap}$
	.0
КМ	/Т
Motor 0%	
Battery 100%	
0.0	00:00 ~
Trip km	Trip time
	100
1	100
ECO - Assist level 🛩	Remaining km
At O	

Example: "Choose and keep your finger on the tile in the top left corner.

09.06 图 ⓒ ♥ •		
Time	Speed	
Trip km	Avg. speed	
Total recorded time	Total recorded dista	
Trip km	Trip meter	

It switches to an overview of tiles. Choose a new tile.

09.05 🖪 🕑 두 🔸	<b>Fi 😥 🔍 Q 💯 .</b> 🗎	
Promo		
Gam	ima X	
09:05 Time	100% Battery	
#D <b>*</b>		
<b>0.0</b>		
Motor 0%		
Battery 100%		
<b>O.O</b> Trip km	<b>00:00 ~</b> Trip time	
<b>1</b> ECO - Assist level ~	100 Remaining km	

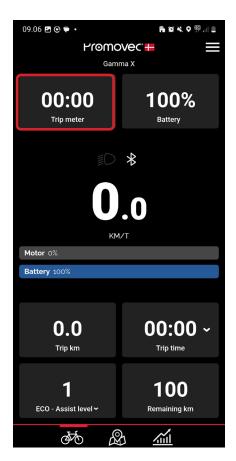


The tile is display in the driving screen.

# MAP

Select the map icon in the bottom middle. The blue dot indicates the position.



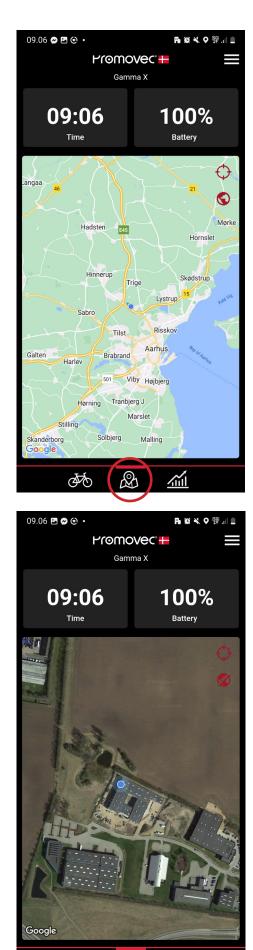


**\$** 

 $\mathbb{R}$ 

Switch the map view using

the globe.

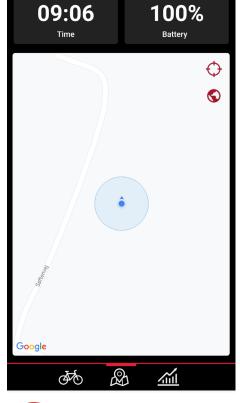

Promovec H

Gamma X

₽ \$ \$ \$ 9 \$ ... ...

09.06 🖪 🔗 🕑 🔹

Center and zoom in with the crosshair at the top right of the map.

PAGE 8


## HISTORY

Select history to view totals.

- Total km
- Total time
- Average ridden km pr. week Select "View additional" to view.
- Distance since last reset
- Average speed\*
- Time since last reset
- Top speed\*
- Longest trip\*
- Total distance
- Total time


\*Can be reset.


14.11 🗭 M 🖪 🔸	■ 11. ♀ ♀ ¥ 21 ■
Promoved	:=
Gamma X	
History	
Total km	0.0 km
Total time	00:10:19
Avg. ridden km per week	0.0 km
View additional	>
04-12-2023	00:03:34 🗑
Languya Puter Antherit	Tille Meldens Ga
G The Cantina Aps	ys ApS
Google	Map data ©2023
	<b>X</b>

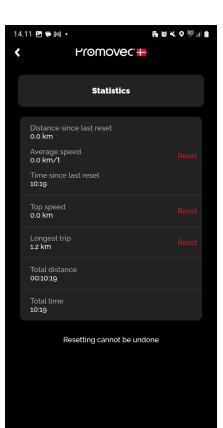

#### MENU

Open the menu, you'll find more information and bike settings. The information displayed applies to the selected bike. Under bike information, the data entered when the bike was added is shown.

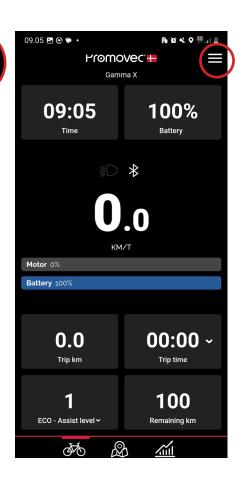

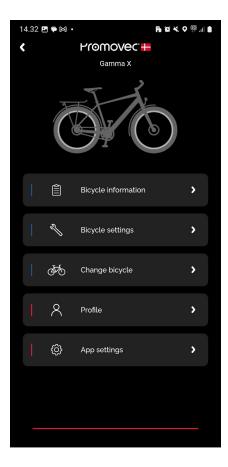


4.11 🖪 🗭 🕅 🔹		┡ 22 Ҳ ♀ ∰	
	Promovec 🖶		
	Bicycle settings		
The bicycle's n	ickname	Gamma X	
Wheel size		221 in	
Drive mode		eco 🔰	
Statistics		>	
Bicycle worksh	ор	>	
Disconnect from	m the	>	
Delete bicycle		>	

**Bicycle settings** Wheel size can be modified here and drive mode can be changed.

14.12 🖪 🗭 🕅 🔹		┡ छ Ҳ ♀ थ़ ●
<b>«</b>	Promovec"	
	Bicycle settings	
The bicycle's		
Wheel size		
الان المقاطعة م ويتسعي عند عام	Enter wheel size	
	221	
	Update	
Disconnect fr		
Delete bicycle		>


Enter wheel size Note! If the wrong wheel size is entered, the speed display will not be accurate.

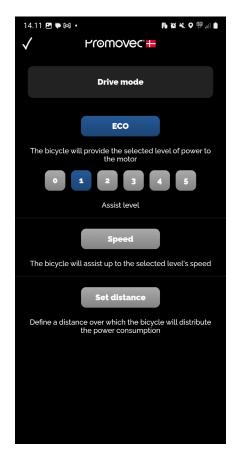

Drive mode Choose your preferred driving mode or enter the distance you would like to drive.

# MENU - CHANGE BICYCLE


If you have multiple bikes equipped with Promovec's electric system, it is possible to add them if they also have a display equipped with Bluetooth. Once a bike is turned on, select it in the bike overview. It is recommended to give each bike a name that makes it easy to distinguish between them.

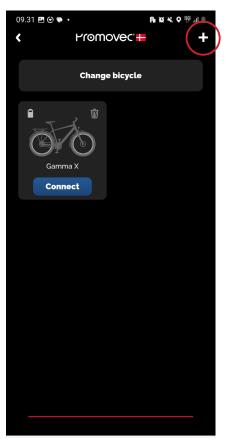

Using the + icon, you can add more bikes to the app.



Select the bike, name it, and upload documentation in the form of pictures for the bike.

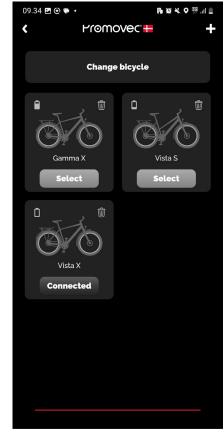


A bike can be chosen with "Select".

# MENU - PROFILE

Email and password can be changed under profile settings.

- The documents previously uploaded for the active bike are found under documents
- Additionally, you can review the terms and conditions as well as privacy policies approved during the app installation.
- Log out.
- Delete your account Be aware that your data cannot be recovered.

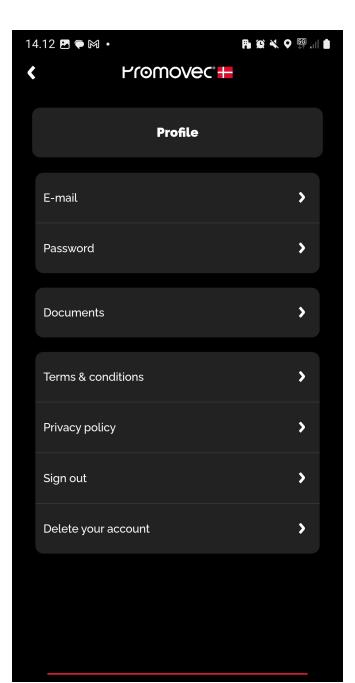


# **MENU - APP SETTINGS**

Vælg indstillinger for App'en.

- Enhedsformat Vælg Metrisk eller Imperial
- Nulstilling af triptæller vælg om triptællerskal nulstilles ved turens start eller manuelt.
- Rediger felter på køreskærm Vælg den information som skal vises på køreskærmen (Kan også gøres direkte fra køreskærmen).

# - HÅNDTER TILLADELSER Vigtigt!

- For at kunne bruge kortfunktionen er det nødvendigt at give tilladelse til lokaliteter.
- For at kunne tage billeder af cyklen og købsbevis er det nødvendigt at tillade brug af kamera i app'en.

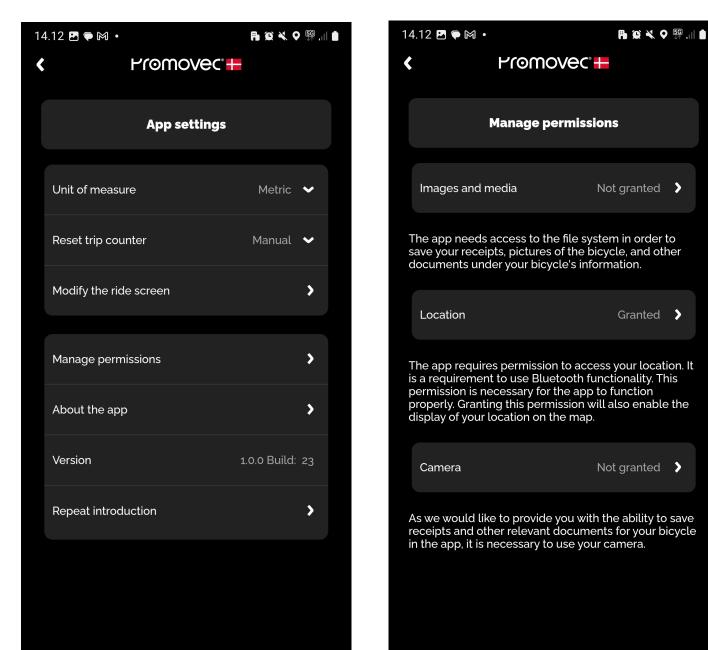

# APP TROUBLESHOOTING

If problems occur when using the app try the following list to troubleshoot:

- 1. Turn on Bluetooth in the mobile settings
- 2. Restart the app
- 3. Update Connect+ to the latest version
- 4. Make sure the Smartphone is not connect in both the app and under bluetooth settings

Contact you dealer if this list does not solve the problem.





DANISH DESIGN | DANISH DEVELOPMENT