


GT20RS Rear Rack Fit Kit (GS600139)

REAR RACK SOLD SEPARATELY

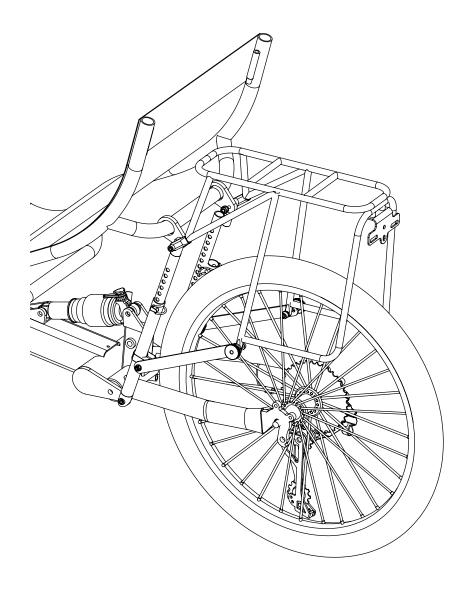


Revised 01/2025

GreenSpeed



1


PARTS LIST:

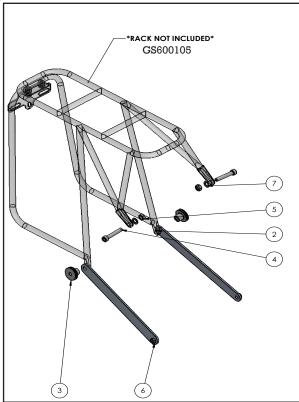

I	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
Ī	2	TT000860	RACK, STAY 195mm	2
ſ	3	WC000159	HW, M6 THUMB NUT	2
Ī	4	WH000178	M6x1.0 X 35mm SHCS FULL THREAD	2
Ī	5	WH000007	M6x1.0 Nylon Locknut SS	2
	6	WH000004	M5x0.8MM STAINLESS STEEL NYLON- INSERT LOCKNUT (TT000252)	2
ſ	7	WH000055	M6 Flat Washer w/12mm OD, SS	2

- *Rack load capacity: 50lbs
- *Adjust frame shock pressure based on combined load
- *Do not exceed trike combined load limit of 300lbs


Uninstall upper seat stays and hardware.
Remove seat stay pins and disengage upper seat stays from lower seat stays.

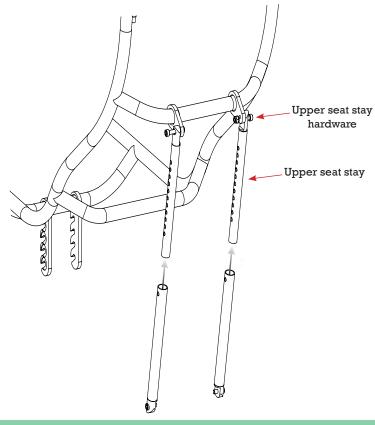


GreenSpeed

2

Slide 19mm rack clamps over lower seat stays leaving bolts loose.

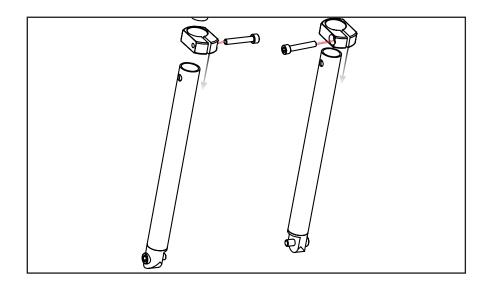


Attach rack and seat stays to seat frame using the M6x35 bolts, M6 washers, and M6 nuts.

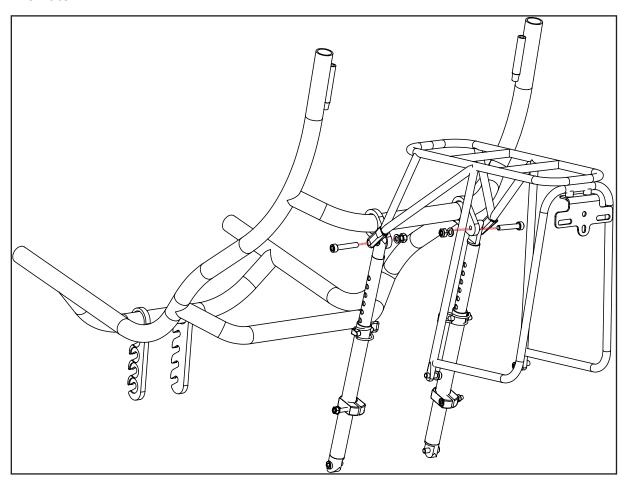

GreenSpeed

4

Attach rack stays to 19mm rack clamps and rack. See parts list for fastener specifications.

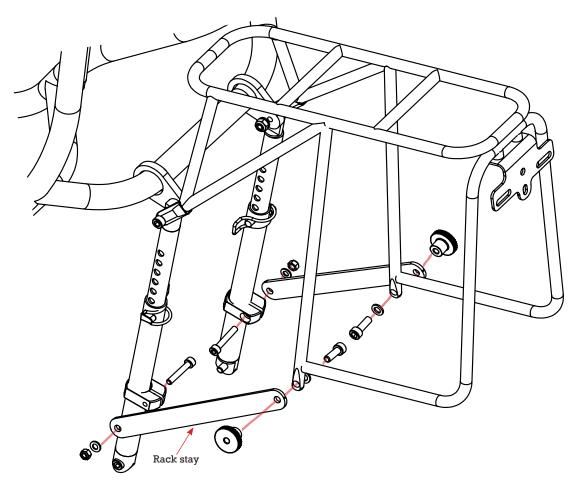

Adjust seat to desired height and angle. Level rack and secure 19mm clamp bolts.

