




Tech Bulletin - GT Boom Shortening

Shortening the GT boom will accommodate riders with an x-seam range of 36"- 45". Follow the steps below to shorten your stock GT boom.

- 1 Measure 2" from the end of the boom and mark the tube. This is the cut line.




- 2 Make sure to deburr and clean up the cut end of the boom. No burrs or sharp edges should be left on the boom.

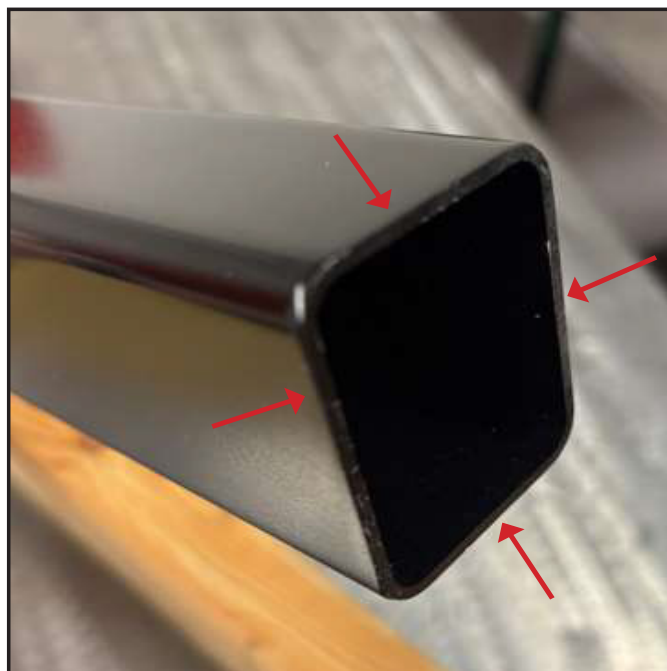

3

Clean and dry the boom. Once dry, place the sticker as shown below. The new minimum insert (edge of sticker) should align with the right side of the "8" without covering it.

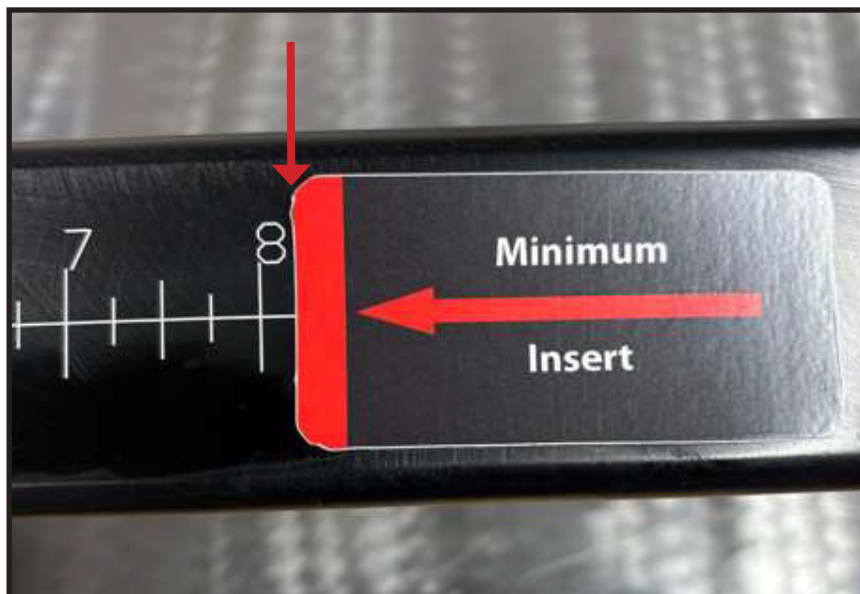

GreenSpeed

800.945.9910 | www.greenspeed-trikes.com
4460 40th St. SE | Grand Rapids, MI 49512 USA