



## GS Chain Gobbler MAG/GT (GS600112)

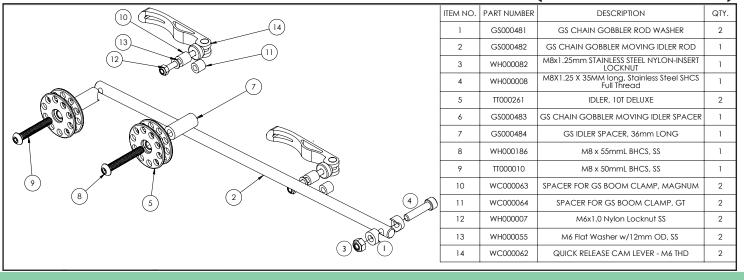


Remove boom clamp bolts. Install Quick Release Levers (14), Boom Clamp Spacers\* (10/11), M6 Flat Washers (13), and M6 Nyloc Nuts (12).

\*Note: Boom clamp spacers are model specific. For Magnum models, use 10.5mm spacers (10). For GT models, use 13mm spacers (11).

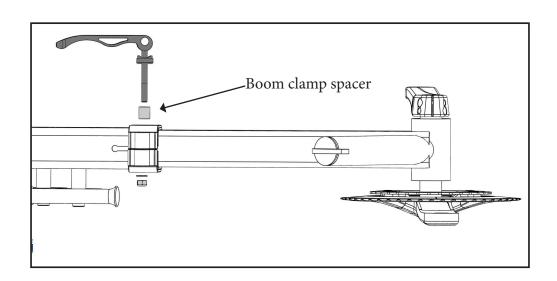


## **GreenSpeed**


Install 10t Idler (5) and Fixed Idler Spacer (7) onto frame using the M8x55 bolt (8).

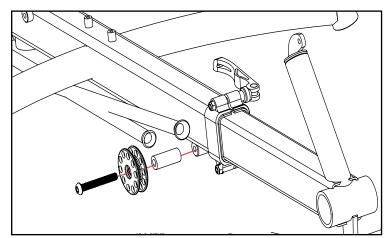

Install Moving Idler Rod Assembly on boom mount using the M8x35 bolt (4) and M8 Nyloc Nut (3).

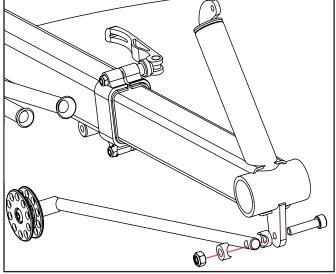

Route chain as shown below.

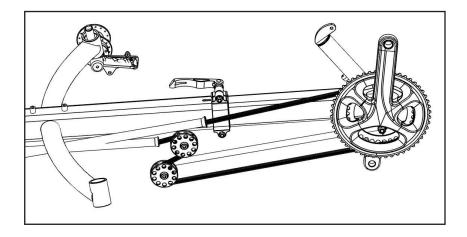

800.945.9910 | www.greenspeed-trikes.com 4460 40th St. SE | Grand Rapids, MI 49512 USA